

# Instruction Manual

## Mounting

- 1 Remove the screw of the adjuster mounted on the table.
- 2 Do not use a tool but mount it tightly by hand, after confirming the screw hole diameter of the table leg.
- 3 Read about how to use the screw diameter conversion adapter before using it.
- A Refer to the installation pattern, when mounting plural moving parts (article number TBN  $\sim$  ).

### Caution -

- 1 Do not mount on the chairs. Such an act might cause the table to fall, resulting in an injury.
- 2 To prevent an oil leak, do not damage the product.
- 3 Do not hit something hard with the T.balance or throw it off. Such an act might cause an oil leak or broken pieces might cause an injury.
- 4 If oil gets on your hand, wash it off with soap or a cleanser.
- 5 Keep the T. balance away from the reach of children.


#### Caution after installation

- 1 Finish mounting the T.balance before using it.
- 2 Do not do height adjustment by rotating the T.balance.
- 3 Do not put anything over the load limit on the table.
- 4 Do not allow anyone to sit on the table. Such an act might cause the table to fall, resulting in an injury.

### Maintenance


- 1 Check the slack of the screws of T.balance regularly. Tighten it when screws are loose.
- 2 Tighten all screws well when a table wobbles because of a loose screw.
- 3 Do not adjust the height by rotating the screws after all have been tightened.
- 4 Oil may leak slightly in normal use and it is not a problem.

The way to use the screw diameter conversion adapter (notice that I changed the wording of this title) The main body screw's diameter is 6mm. Do not use an adapter for the 6mm leg screws.

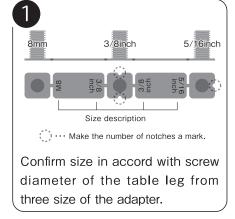




Cover the male screws of T.balance with the adapter of the correct size and attach it.

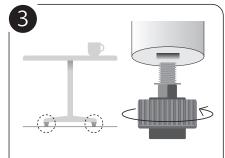

Mount the T.balance with the attached adapter to the internal threads of the table leg.

 Installation pattern ( ■ Moving parts Article number TBM~ ○ Non-moving parts Article number TBD~)



Basic pattern 2

